


B1IG00K1 - 406D9 ES9J4 ENGINE

REMOVAL - REFITTING PLUGS

1 - REMOVAL


Remove the inlet manifold .

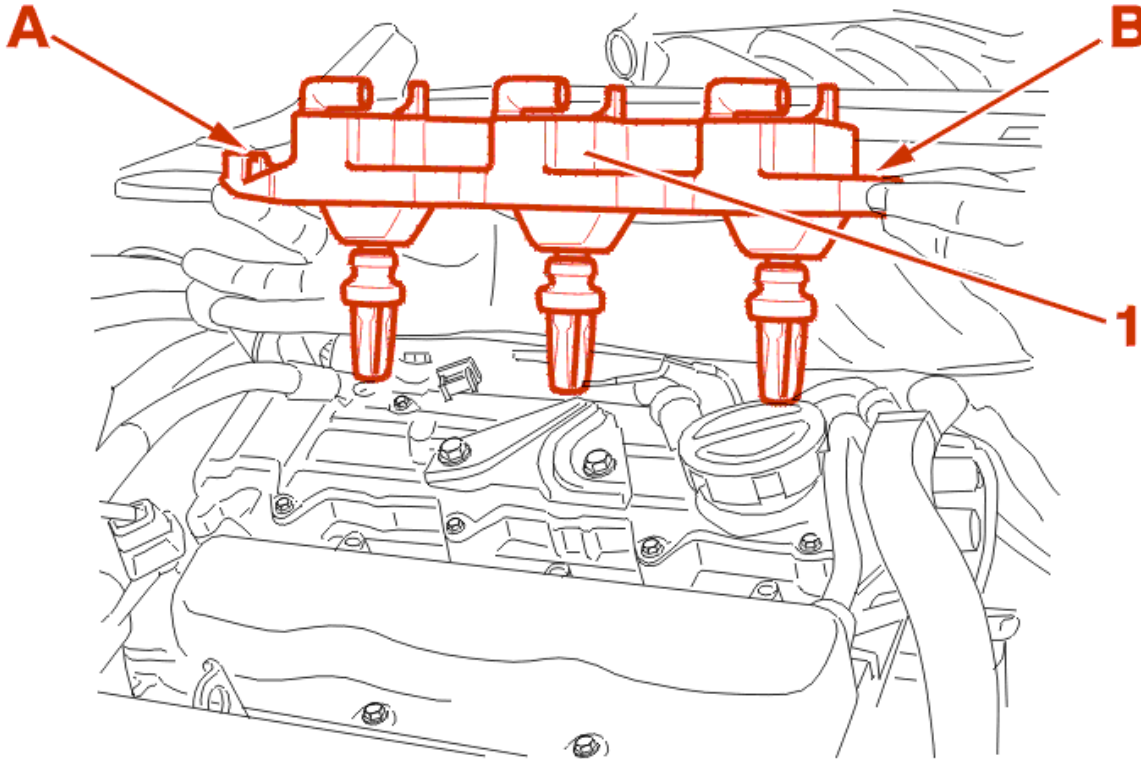

Disconnect :

- the compact coil block supply connector (1)

Remove the compact coil block assembly (1) by using the ends (A) and (B) .

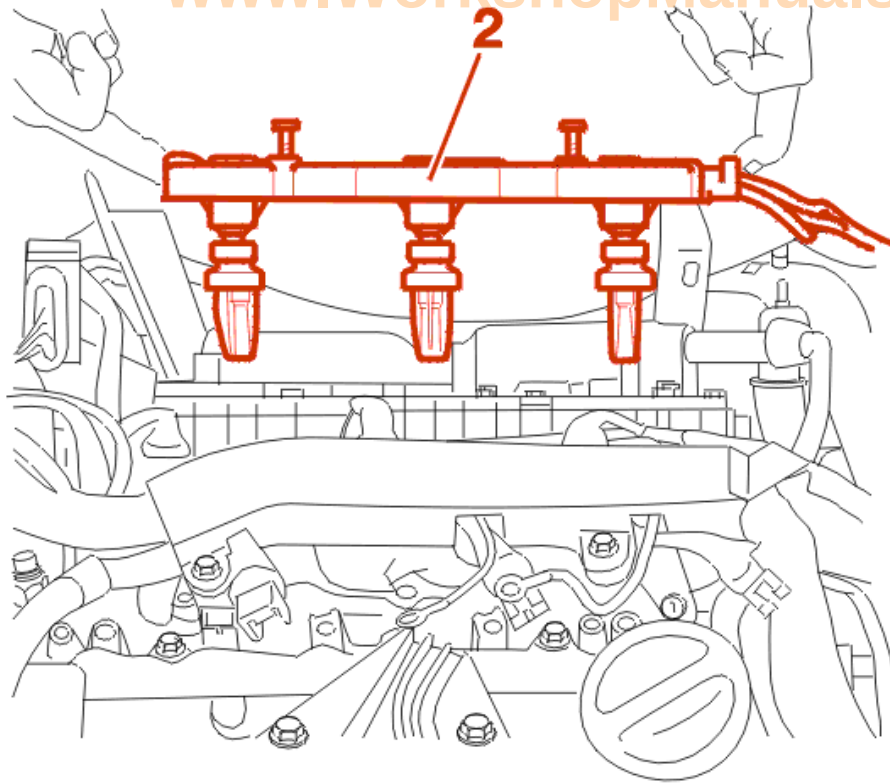

Remove :

- the secondary coil assembly (2)
- the spark plugs

2 - REFITTING

Proceed in the reverse order to removal .

Tighten to the required torque using a FACOM D21 or D150.3 type spanner (Tightening torque 2.5 da. Nm) .