


B2BD00K1 - 406D8 BE3 GEARBOX

CHECKS CLUTCH CABLE CONTROLS WITH AUTOMATIC ADJUSTMENT

1 - CHECKS

Remove the air cleaner and the air intake pipe .

1 - 1 - PUSHED CLUTCH

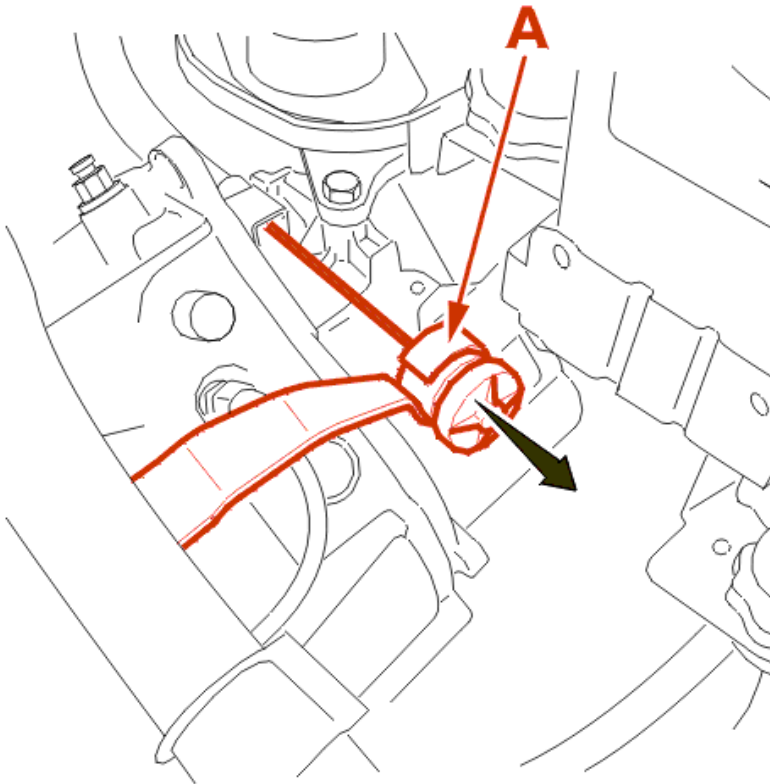


Move the gearbox clutch release lever towards the front of the vehicle (in the direction of the arrow) by applying a force at (A) .

The clutch release lever must return effortlessly .

*NOTE : if it cannot be moved, de-clutch approximately ten times using the pedal then repeat the operation .*

In the event of a negative result from the previous check, the automatic adjustment must be released .

1 - 2 - PULLED CLUTCH

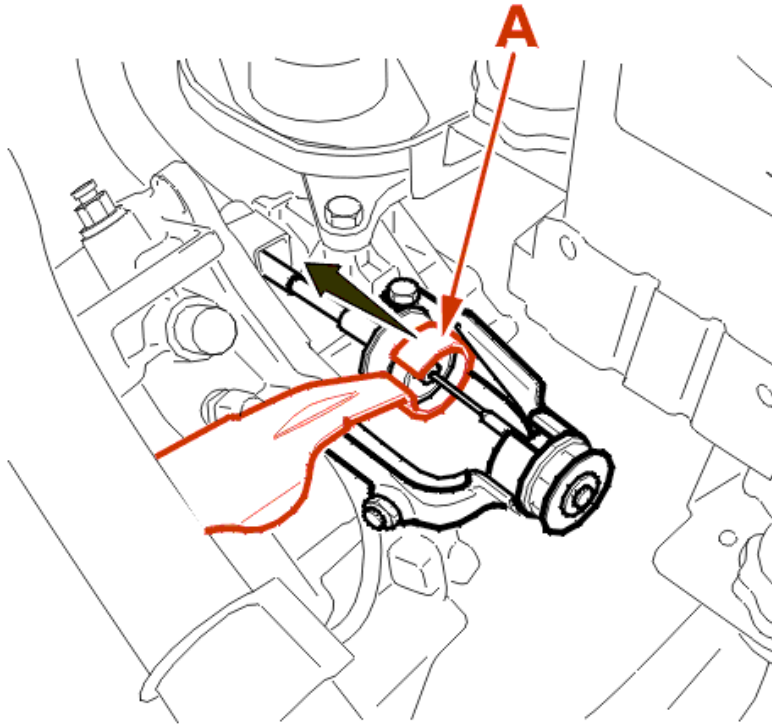

Move the gearbox clutch release lever towards the rear of the vehicle (in the direction of the arrow) by applying a force at (A) .

The clutch release lever must return effortlessly .

*NOTE : if it cannot be moved, de-clutch approximately ten times using the pedal then repeat the operation .*

In the event of a negative result from the previous check, the automatic adjustment must be released .