


B2BD01K1 - 406D8 BE3 GEARBOX


RELEASING CLUTCH CABLE CONTROLS WITH AUTOMATIC ADJUSTMENT (PUSHED CLUTCH)

Remove the air cleaner and the air intake pipe .

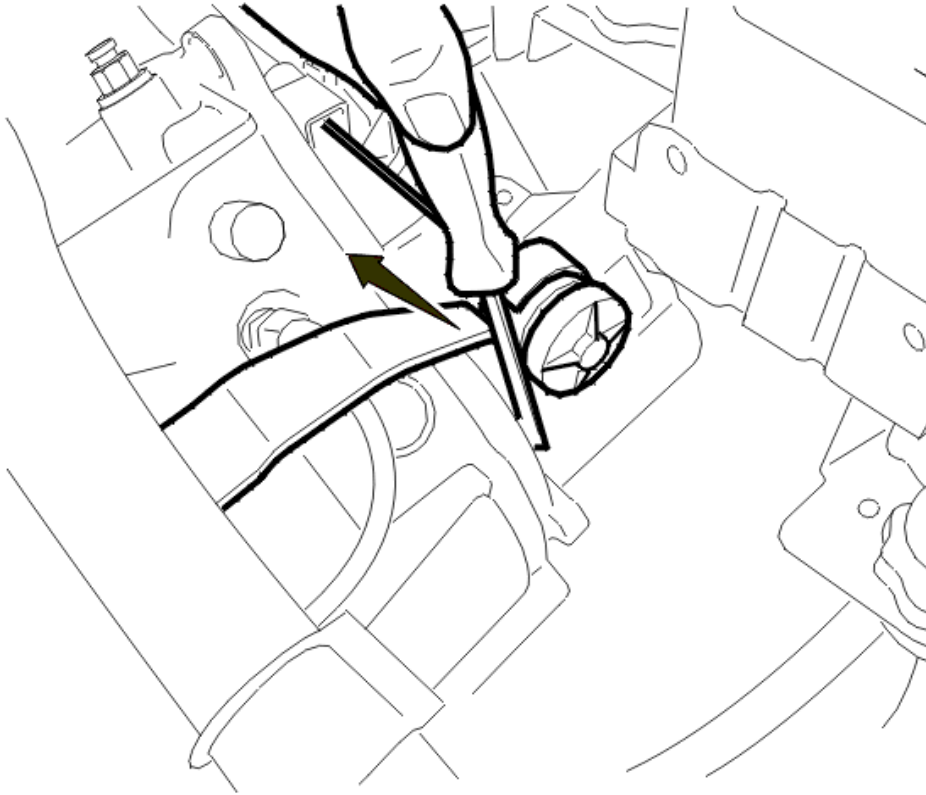

Apply a force to the gearbox clutch release lever towards the rear of the vehicle (in the direction of the arrow) then allow it to return slowly .

De-clutch approximately ten times using the pedal .

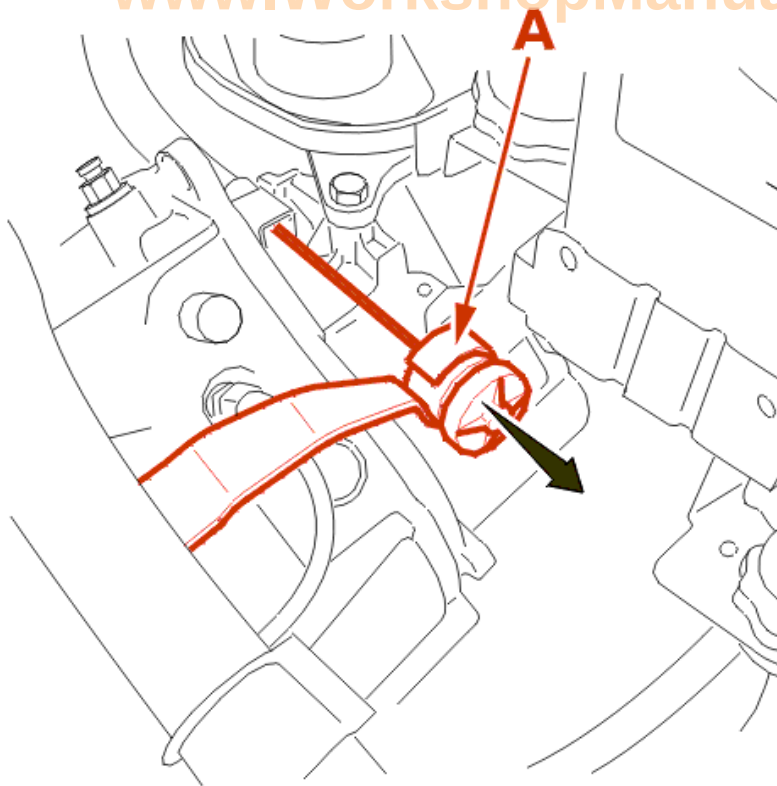

Move the gearbox clutch release lever towards the front of the vehicle (in the direction of the arrow) by applying a force at (A) .

The clutch release lever must return effortlessly .

If the clutch release lever is still locked :

- de-clutch by several centimetres using the pedal
- hold the gearbox clutch release lever in this position

Release the pedal to eliminate the effort on the cable .


Remove the cable on the clutch release lever side by pulling the cable towards the front of the vehicle .

*WARNING : take care not to unhook the pedal yoke .*

If the automatic adjustment cannot be released, cut the cable and replace it .

Slowly release the clutch release lever .

Refit the cable to the gearbox clutch release lever .

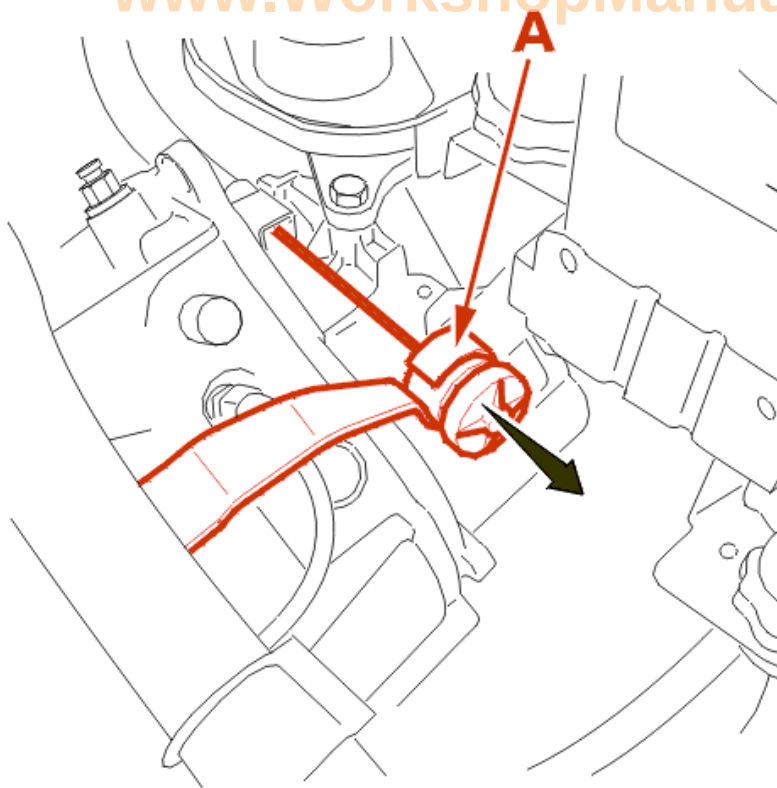

Move the gearbox clutch release lever towards the front of the vehicle (in the direction of the arrow) by applying a force at (A) .

The clutch release lever must return effortlessly .

*NOTE : if the automatic adjustment locks, replace the cable .*