


C5FG1EF1 - 406D8

REMOVAL - REFITTING FASCIA

1 - SPECIAL TOOLS

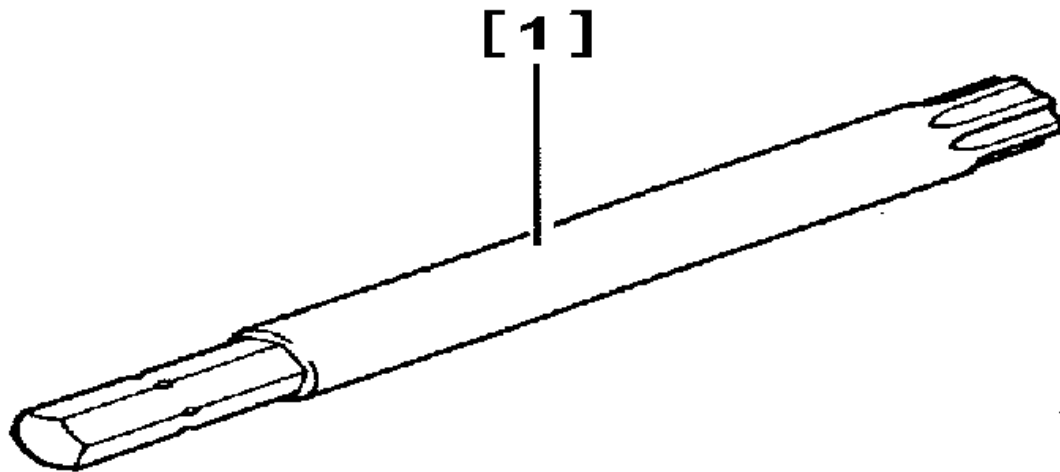

Adaptor with TORX head (-).0718 .


2 - REMOVAL

Remove the floor console front and rear fastenings before disconnecting the battery .

Disconnect the battery .

Remove :

- screen wiper mechanism

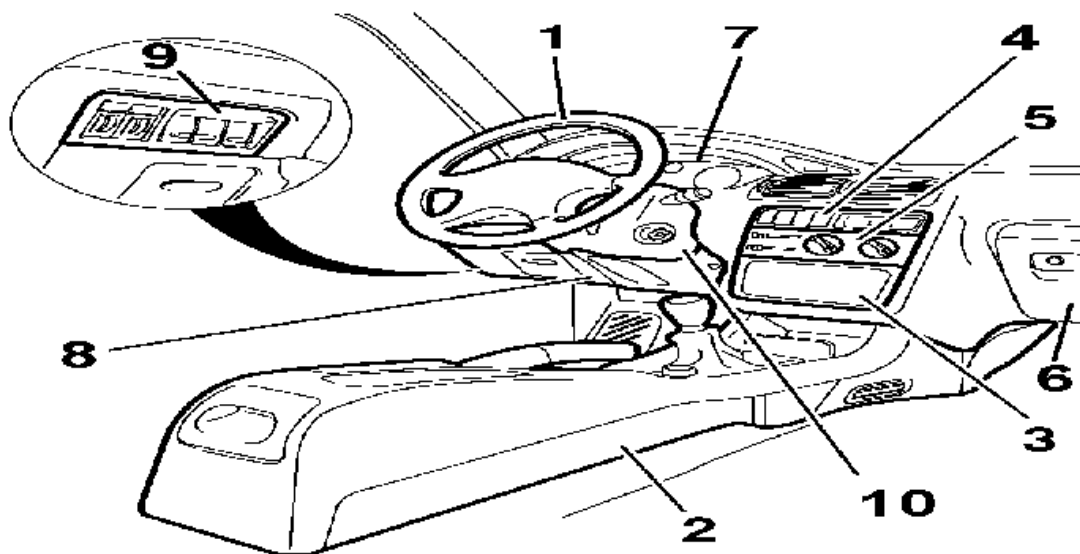

TEMPERATURE REGULATION

Remove the sunshine sensor .

DRIVER'S AIR BAG PASSENGER AIR BAG

Remove the module :


- on the driver's side
- passenger's side

IMPERATIVE : observe the removal recommendations .

ALL MODELS


Remove :

- the steering wheel (1)
- [THE FLOOR CONSOLE \(2\)](#)
- [THE RADIO BRACKET \(3\)](#)
- [THE CENTRE SWITCH BRACKET \(4\)](#)
- the heater control panel (5)
- the glove box (6)
- [THE BINNACLE \(7\)](#)
- the bottom left-hand trim (8)
- [THE SWITCH BRACKET \(9\)](#)
- the steering column half shroud (10)

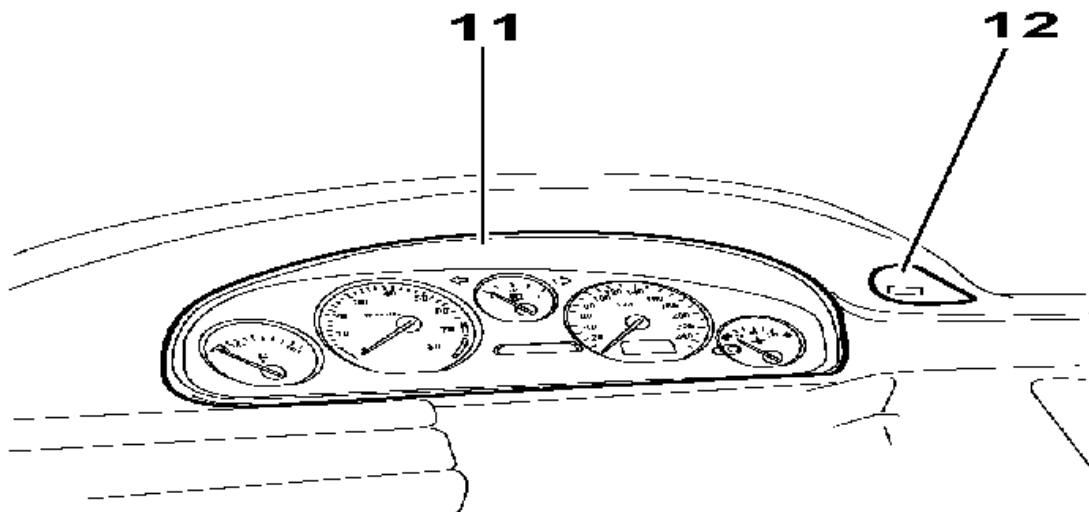

Remove :


- [THE INSTRUMENT PANEL \(11\)](#)
- [THE CLOCK \(12\)](#)

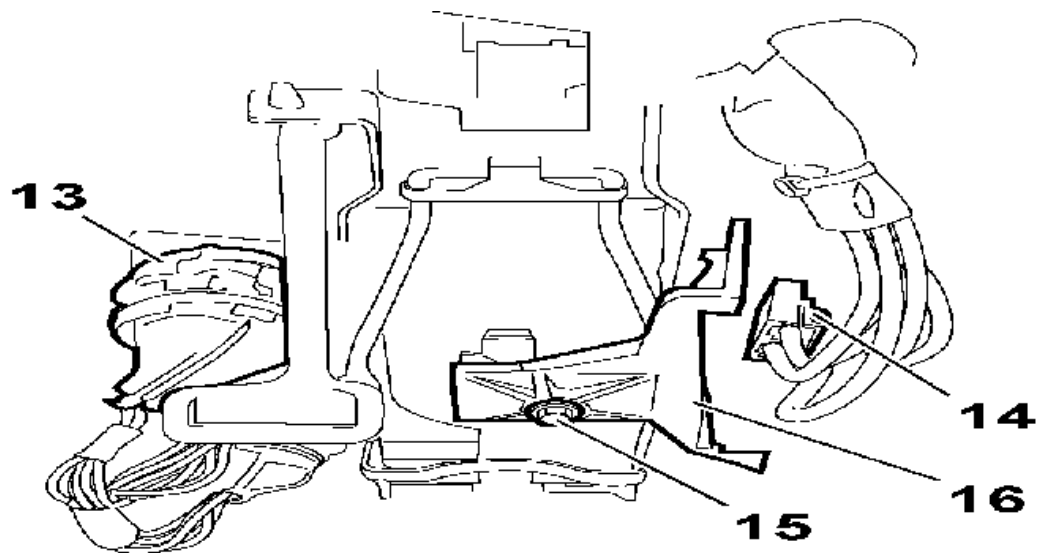

Disconnect the electrical connections (13)-(14) .

Remove the bracket fastening (15) .


Let the wiring bracket (16) hang down .

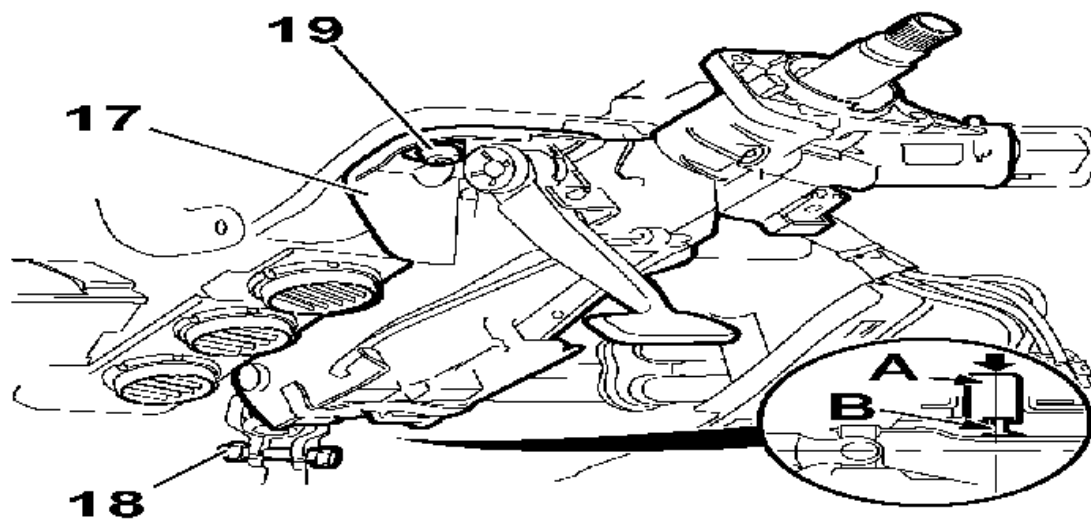

IMPERATIVE : before removing the steering column assembly (17), push the button (A) on the universal joint indexer (B) to secure it in position .

Remove :


- the universal joint fastener (18)
- the fasteners (19)

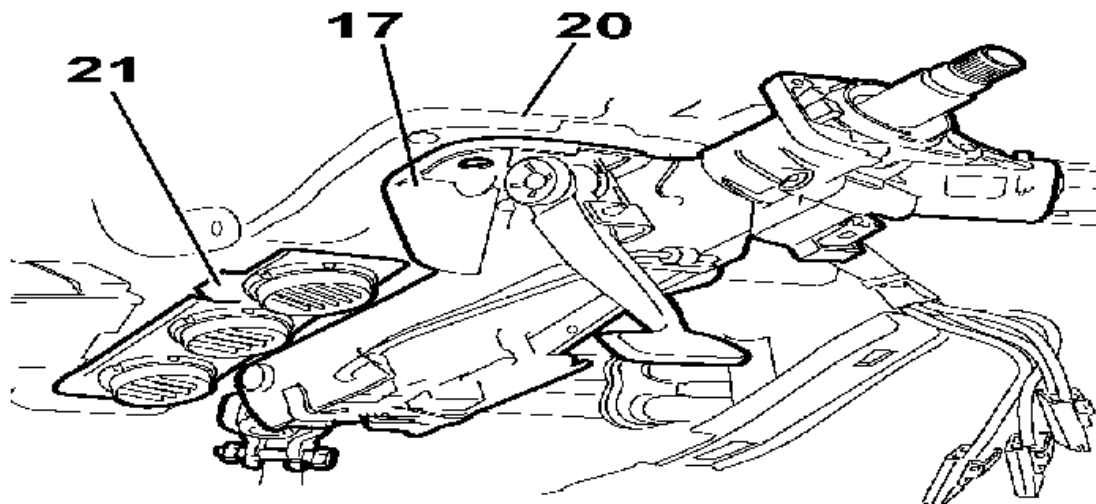

Grasp the steering column assembly (17) and pull towards you in order to detach the rear part of the column bracket (20) .


Remove :

- the steering column assembly (17)
- the connector bracket fastenings (21)

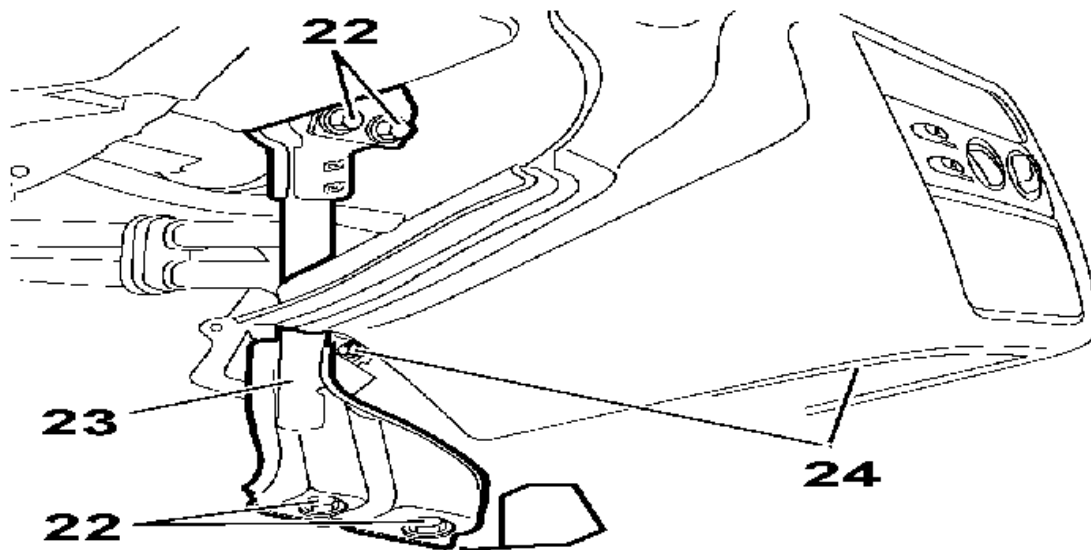

Remove :


- the fasteners (22)
- the strengthening strut (23)
- the fasteners (24)

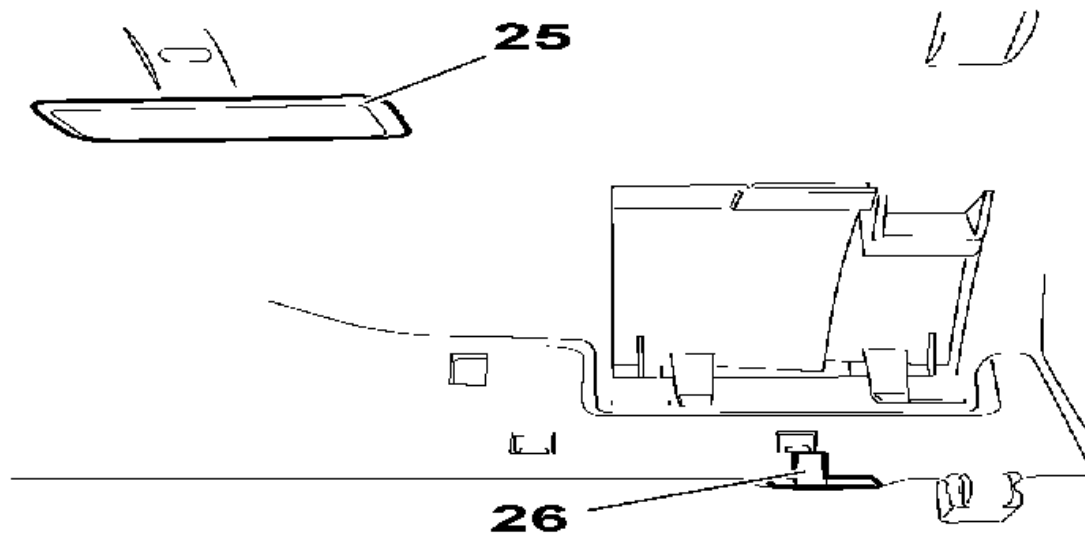

Unclip the glove box lamp (25) .

Disconnect the electrical connection .

Disconnect the electrical connection from the switch (26) .

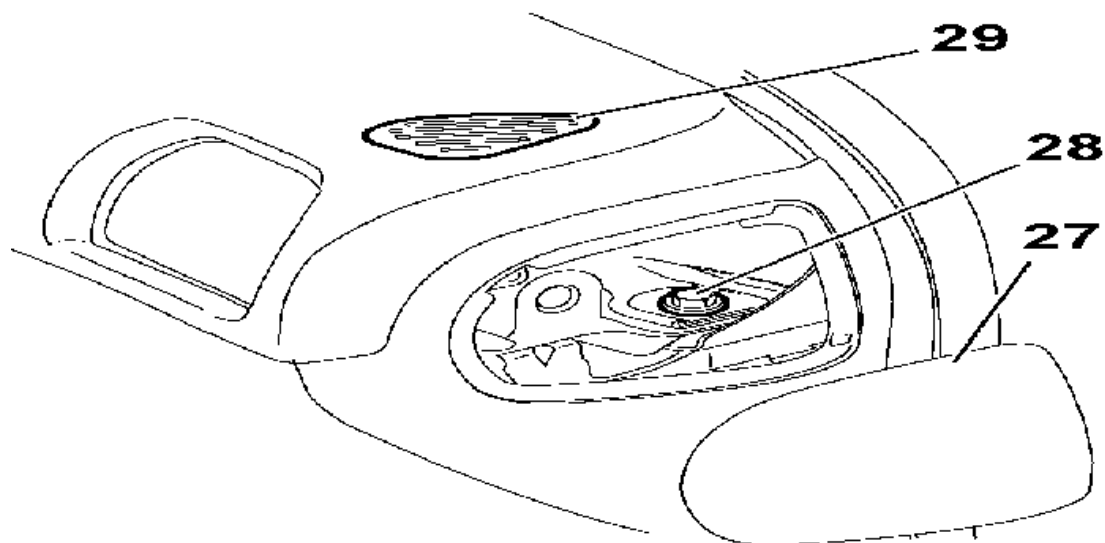


Use a spatula to remove the blank (27) .

Remove the fastener (28), Left and right .

RADIO EQUIPMENT

Using a spatula, unclip, disconnect and remove the right and left tweeter grilles (29) .

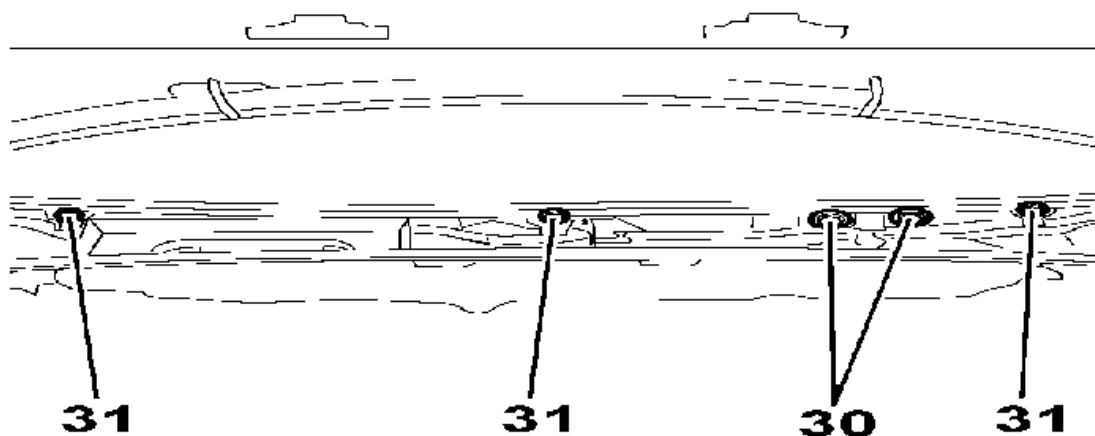


ALL MODELS

Remove :

- the fasteners (30)
- the fasteners (31)

With two operators, one each side of the fascia, pull it towards you to disengage it from the bulkhead .

Remove the fascia .

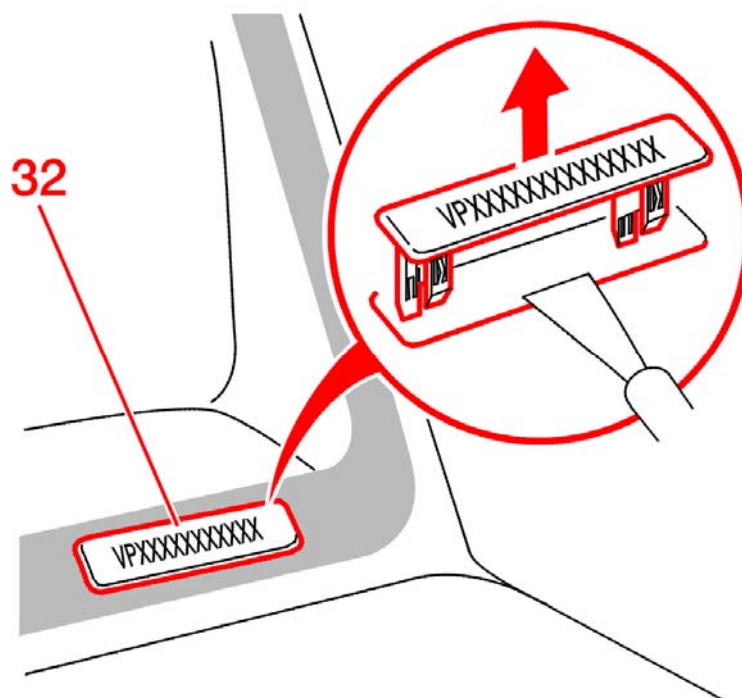


IMPERATIVE : unclip the plate with the VIN number .

Remove the plate (32) .

3 - REFITTING

Refit the plate (32) .

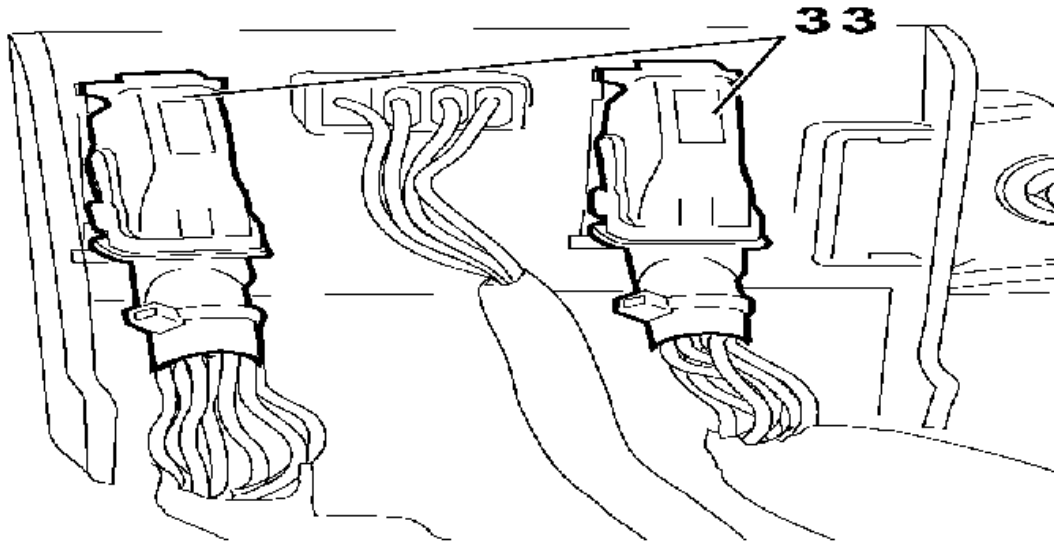

WARNING : clip the instrument panel connectors to the bracket (33) before fitting the fascia .

Proceed in the reverse order to removal .

Check that the electrical accessories operate correctly .

IMPERATIVE : the heater fastenings (24) are fitted before the torque arm (23) is fitted .

Release the button (A) after fitting the steering column (17) .

Tightening torque(s) :

- the fascia/bridge cross member fastening(s) (28) : 1.9 da.Nm
- the steering column to bracket fastening(s) (19) : 2 da.Nm
- steering universal joint fastener (18) : 2.2 da.Nm
- the fascia to scuttle fastening(s) (31) : 0.8 da.Nm
- the steering column to bulkhead fastening(s) (30) : 2.4 da.Nm
- strengthening strut fastener (22), 1.9 da.Nm