

Wire colours

BA White	OR Orange
BE Blue	RG Red
BG Beige	RS Pink
GR Grey	VE Green
JN Yellow	VI Mauve
MR Brown	VJ Green/Yellow
NR Black	Yellow


Key to items

1 Battery	9 Built in systems interface (BSI)	197 MAP sensor
2 Ignition switch	15 Speed sensor	198 Engine speed sensor
3 Instrument cluster	33 Engine management control unit	199 Fuel injector
b = speedometer	34 Double function relay	200 Power steering pressure switch
c = tachometer	52 Fuel pump/fuel gauge sender unit	201 Throttle position sensor
e = control unit	192 Oxygen sensor	202 Air temperature sensor
z = engine management warning light	193 Canister purge solenoid	203 Coolant temperature sensor
4 Engine fusebox	194 Idle stepper motor	204 Knock sensor
5 Passenger fusebox (28 fuse)	195 Ignition coil	205 Throttle heater
8 Diagnostic socket	196 Spark plugs	206 Inertia switch

Diagram 17

H32052

MM1AP fuel injection system

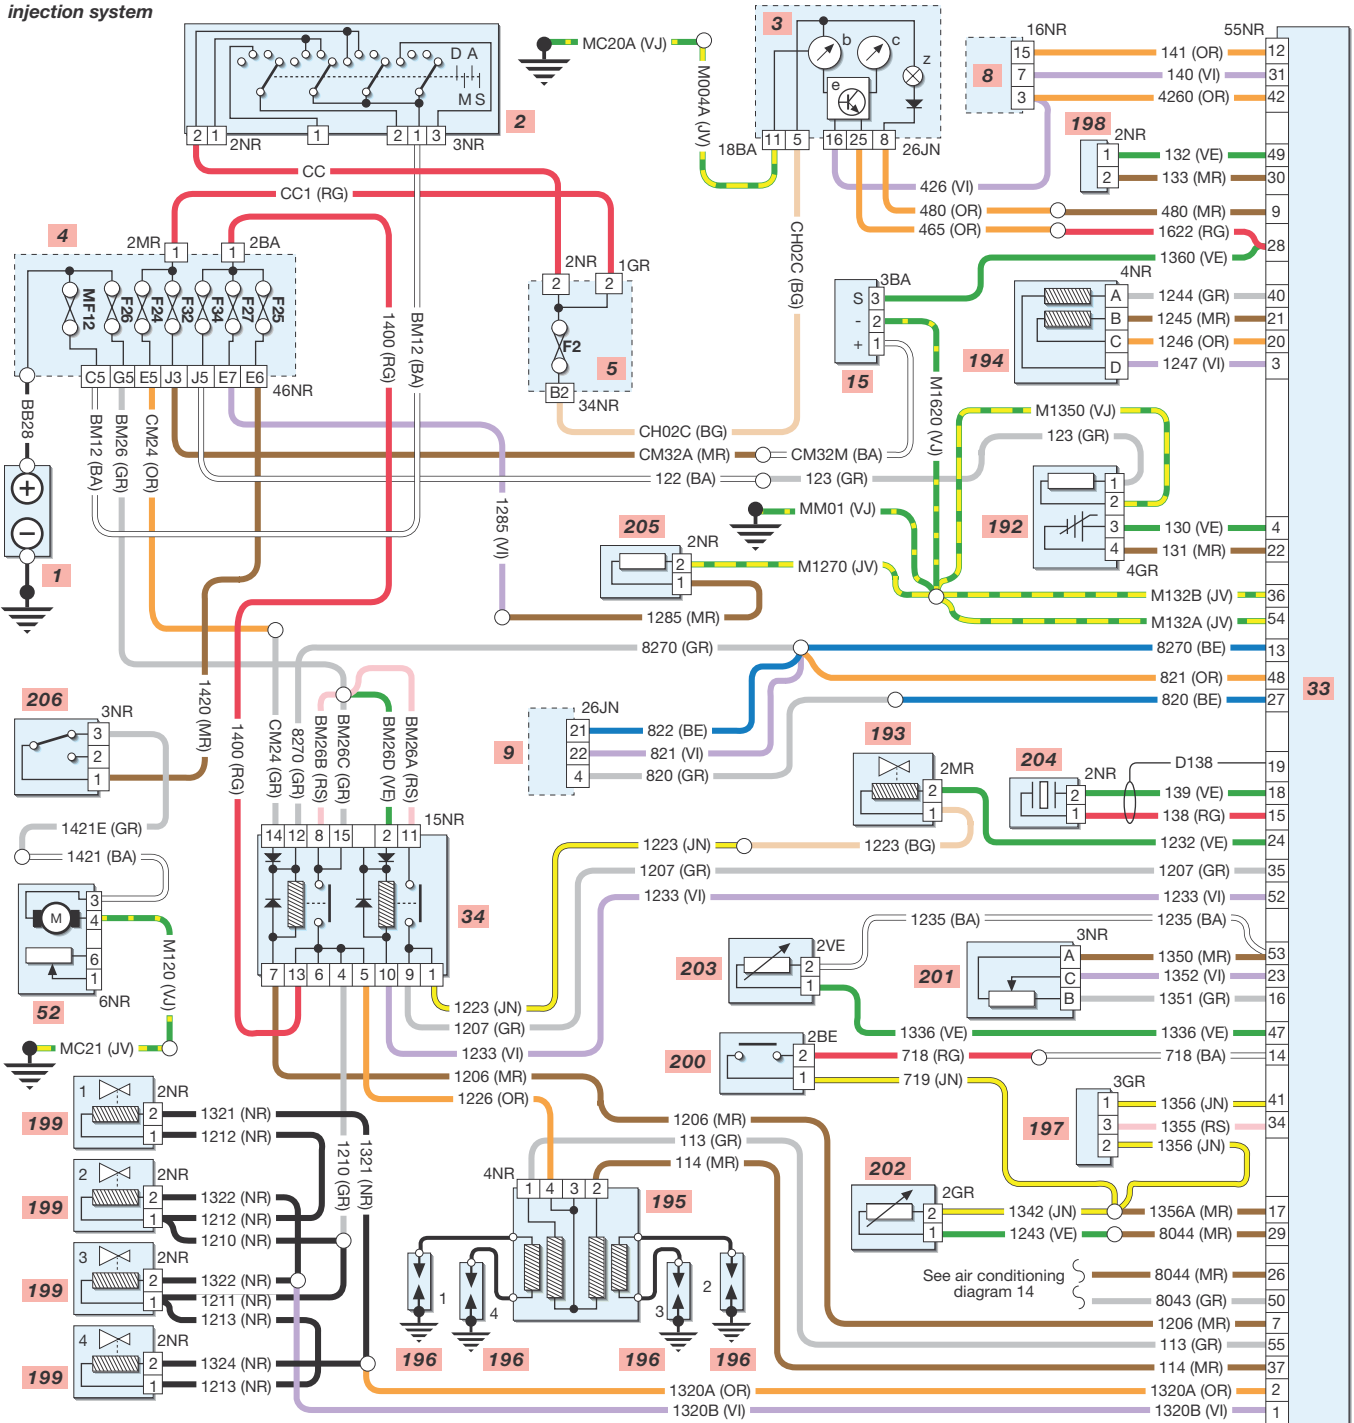

Wire colours

BA White	OR Orange
BE Blue	RG Red
BG Beige	RS Pink
GR Grey	VE Green
JN Yellow	VI Mauve
MR Brown	VJ Green/ Yellow
NR Black	Yellow

Key to items

1 Battery	5 Passenger fusebox (28 fuse)	193 Canister purge solenoid	201 Throttle position sensor
2 Ignition switch	8 Diagnostic socket	194 Idle stepper motor	202 Air temperature sensor
3 Instrument cluster	9 Built in systems interface (BSI)	195 Ignition coil	203 Coolant temperature sensor
b = speedometer	15 Speed sensor	196 Spark plugs	204 Knock sensor
c = tachometer	33 Engine management control unit	197 MAP sensor	205 Throttle heater
e = control unit	34 Double function relay	198 Engine speed sensor	206 Inertia switch
z = engine man. warning light	52 Fuel pump/fuel gauge sender unit	199 Fuel injector	
4 Engine fusebox	192 Oxygen sensor	200 Power steering pressure switch	

Diagram 18

H32053

Bosch MP7.2 Motronic fuel injection system

