

Access/Safety function layout


Access

The access function (locking/unlocking) is provided by the UCH and the key.

Exchanges between the key and the UCH are carried by radio frequency transmission at **433 MHz**.

When the switch is pressed, the key sends out a radiofrequency wave signal. The UCH receives the signal via its built-in aerial.

The UCH authenticates the key and performs the user request if the key belongs and is allocated to the vehicle.

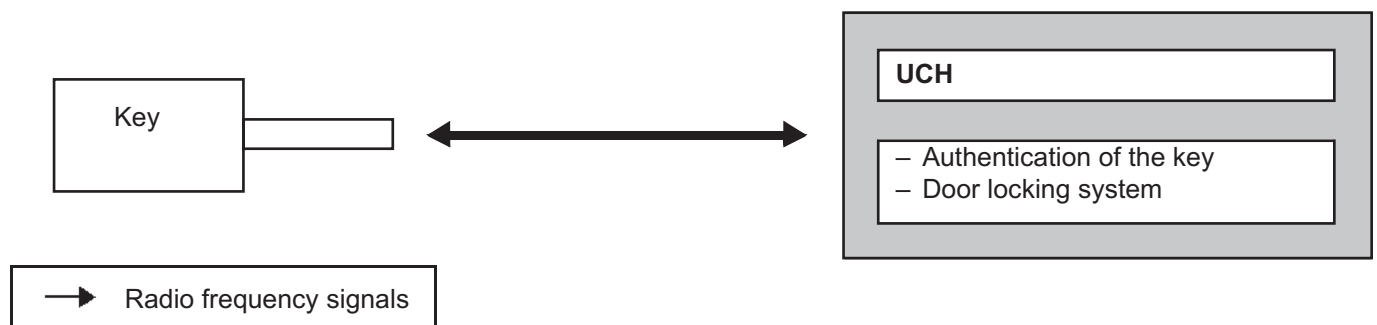

PROTECTION (Immobiliser)

