


SENSOR LOCATION

Name	Symbol	Name	Symbol
Air inlet sensor	I	ISC motor position sensor	C
Air thermo sensor	I	Intake air temperature sensor	A
Barometric pressure sensor	A	Knock sensor	G
Camshaft position sensor	D	Oxygen sensor	E
Crankshaft position sensor	D	Rear speed sensor	L
Engine coolant temperature sensor	F	Throttle position sensor	B
Front speed sensor	J	Vehicle-speed sensor (Reed switch)	H
G-sensor	K	Volume air flow sensor	A


NOTE
The "Name" column is arranged in alphabetical order.

Engine compartment




1.8L Engine








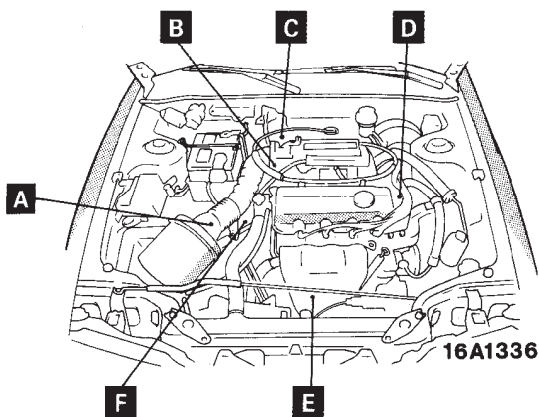





2.0L DOHC Engine <Non-Turbo>

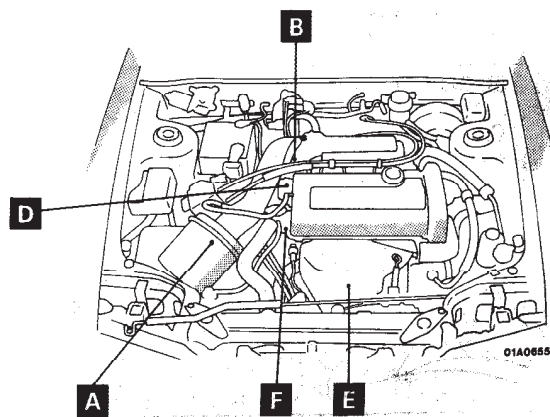

2.0L DOHC Engine <Turbo>

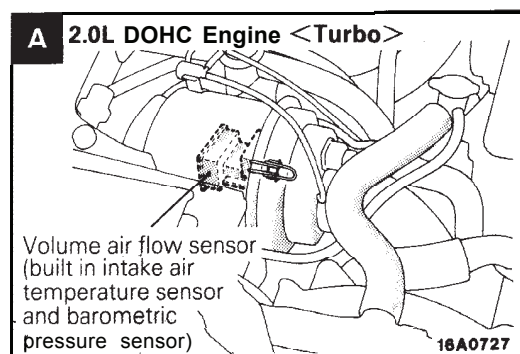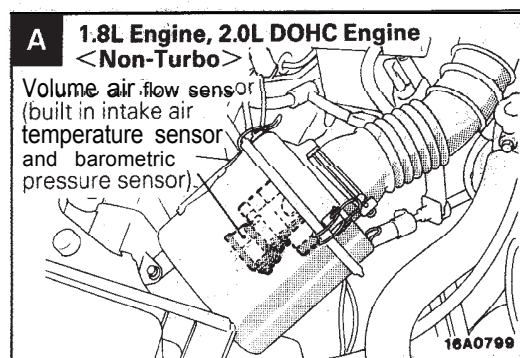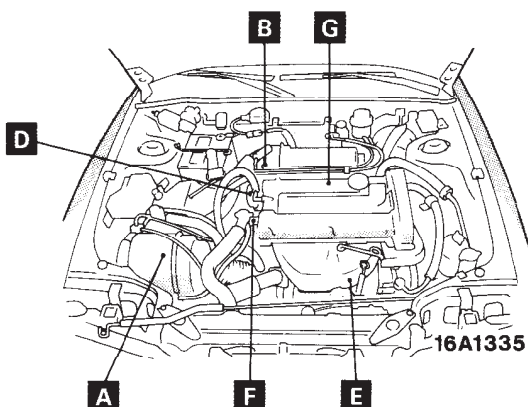

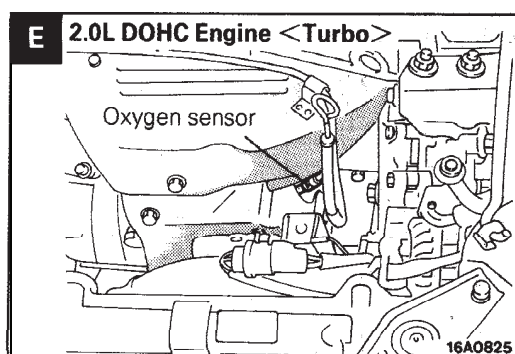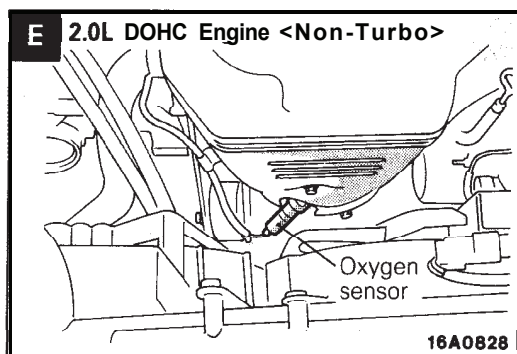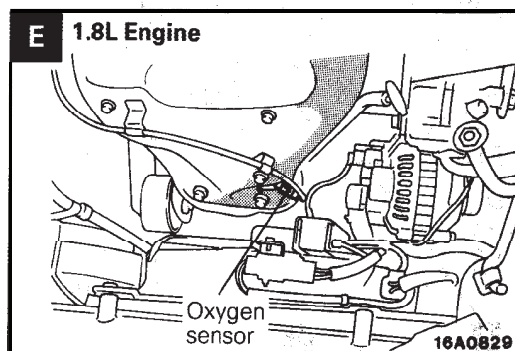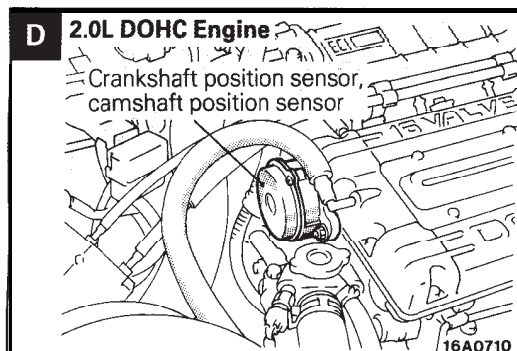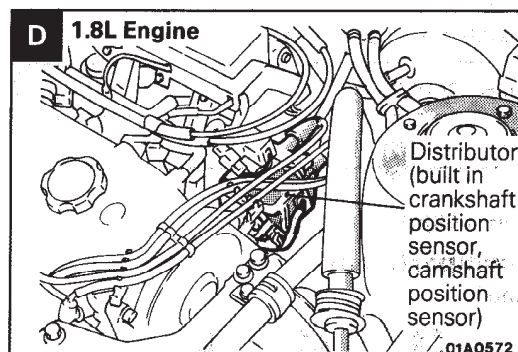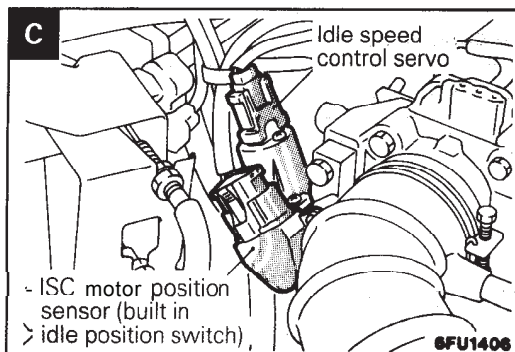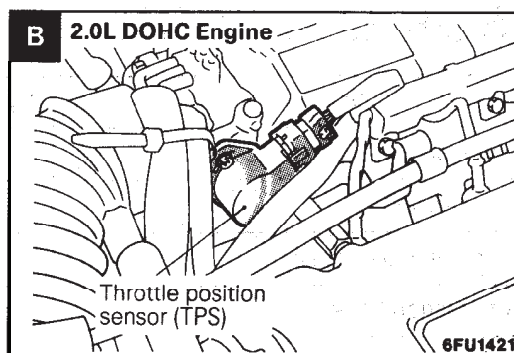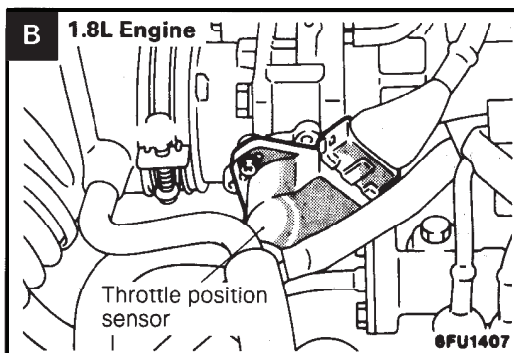

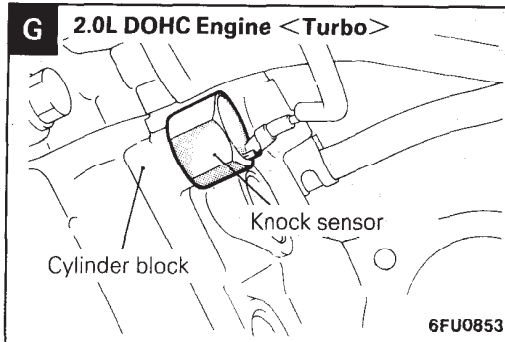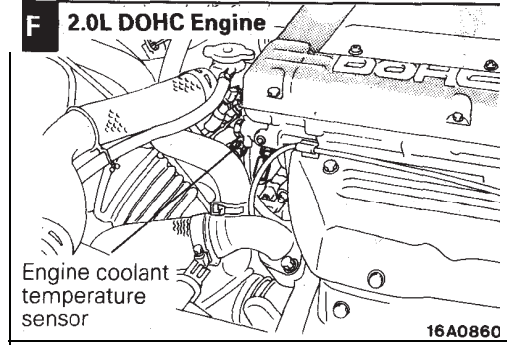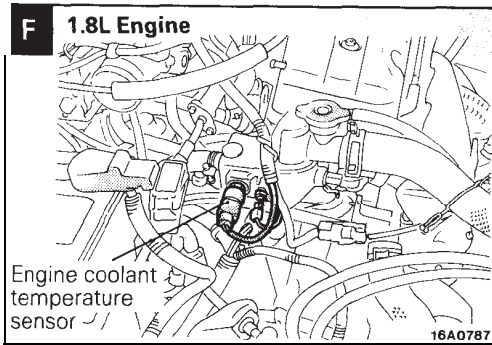

Interior

