


B2BD03K1 - 406D8 ML5T GEARBOX

CHECK CLUTCH PEDAL TRAVEL

1 - SPECIAL TOOLS

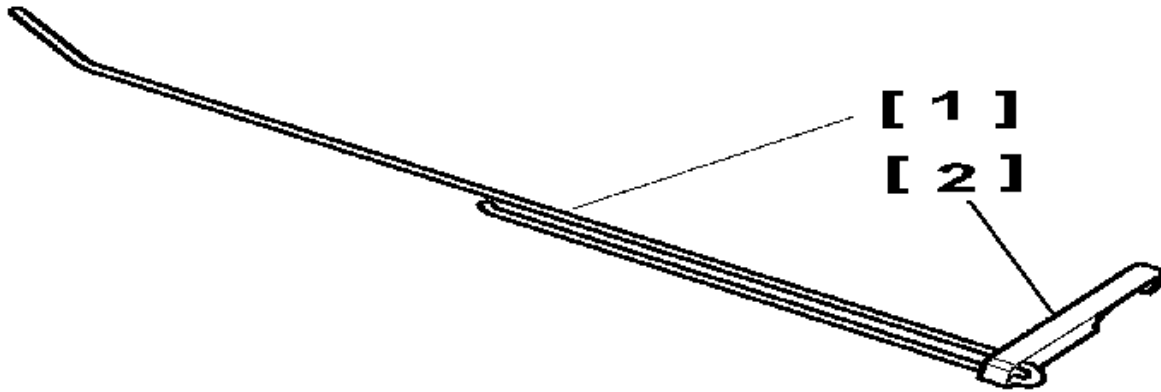


[1] Depth pin for measuring clutch travel (-).0216-H2 .

[2] Pin bracket (-).0216-H1 .

2 - CHECK

Remove the air cleaner .

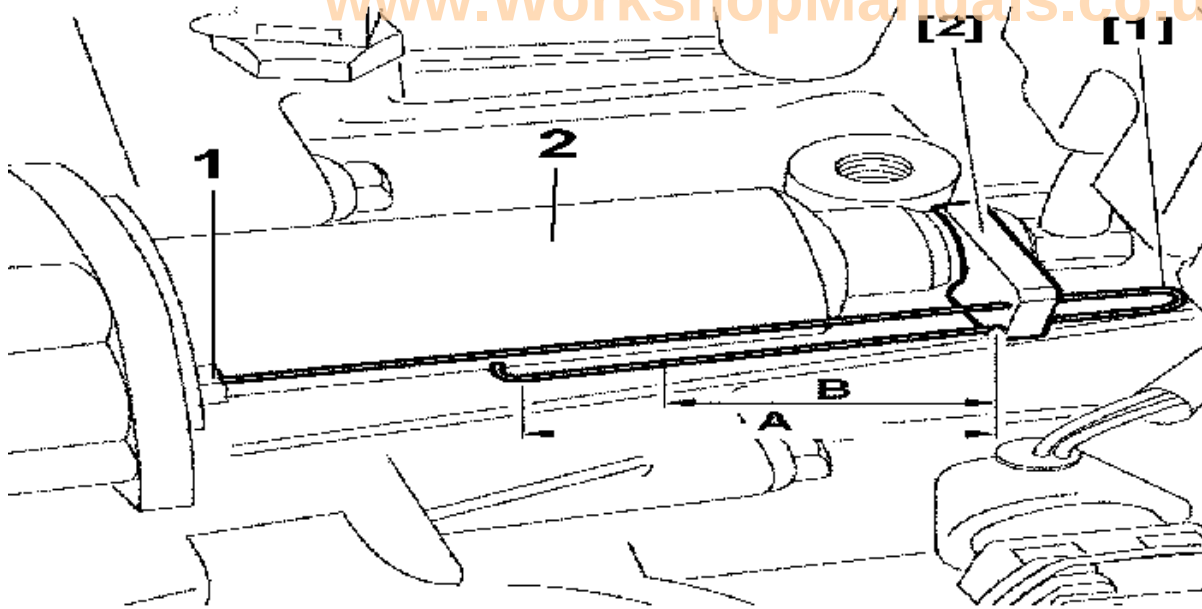

Check that the hole (1) of the slave cylinder (2) is positioned as shown in the diagram .

Position the tools [1] + [2] .

Measure :

- the dimension (A) = clutch pedal to the floor
- the dimension (B) = clutch pedal at rest

Subtract dimension (B) from dimension (A), the resulting value must be at least 13 mm .